

Variables: clasification.

Clasification example:

	From To Category
	0000 0299
Auto Pilot	0300 0399
Landing Gear	0400 0499
Flaps	0500 0599
Plane	0600 0699
Lights	0700 0799
Sound	0800 1099
COMMs, NAVs, ADFs, Transponder	1100 1199
Switches Audio	1200 1399
Visual and aural warnings	1400 1499
Engines	1500 1599
Fuel	1600

	1699
Propellers	1700
	1799
Overhead	1800
	1899
	1900
	1999
	2000
	2099
Orders to USB Keys	3000
	3200
Servos and Stepper variables	

Some users as Manuel Vélez, has preferred to gather all the commands of oneself type in oneself category. Example:

000 to 299 :Offsets commands
300 a 399 : subrutine
400 a 499 : switches and pulses
500 a 599 : encoders
600 a 699 : 7 segments digits
700 a 799 : LEDs
